




SCAN THIS CODE OR VISIT
WILDWESTEXODUS.COM
FOR ASSEMBLY GUIDES AND MORE!

WEX991399026



5 060504 864916

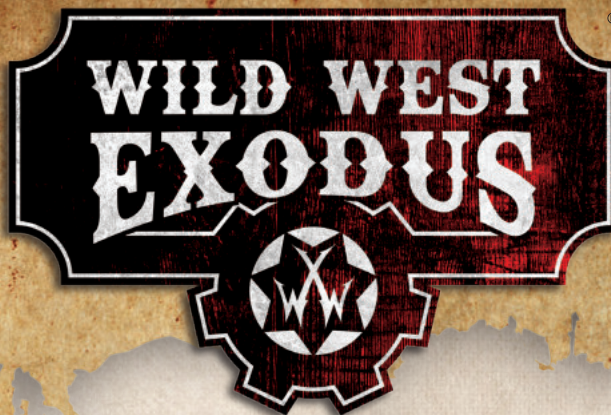

RED OAK JAIL

PART OF THE **DYSTOPIAN AGE**™



@WILDWESTEXODUS



@WARCRADLESTUDIOS



WARNING! NOT A TOY. AGE 14+
HOBBY GAMING PRODUCT
CONTAINS SMALL PARTS



ACHTUNG! KEIN SPIELZEUG. ALTER 14+
HOBBY SPIELPRODUCT
ENTHÄLT KLEINE TEILE



PRECAUCIÓN! NO ES UN JUGUETE EDADES. 14+
PRODUCTO DE HOBBY
CONTIENE PIEZAS PEQUEÑAS



ATTENTION! PAS UN JOUET. ÂGE 14+
PRODUIT DE JEU HOBBY
CONTIENT DE PETITES PIÈCES

THIS PRODUCT CONTAINS MEDIUM DENSITY FIBREBOARD (CLASS E1)




WARCRADLE™
STUDIOS

WARCRADLE STUDIOS IS A TRADING NAME OF WAYLAND GAMES LIMITED. WILD WEST EXODUS IS A TRADEMARK OF WAYLAND GAMES LIMITED.
ILLUSTRATIONS AND DESIGNS ARE COPYRIGHT © 2018 WAYLAND GAMES LIMITED. ASSEMBLED IN THE UK.




Parts may need careful removal from the MDF boards with a scalpel, and light sanding of any rough edges. We recommend testing assembling sections before permanently gluing together.

1

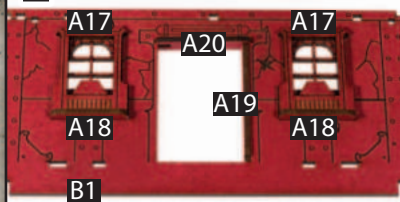


- Connect 2x A18 to B1, then slot A17 into each A18.
- Insert A20 then A19, making sure the notch at the bottom of A19 faces towards you.
- Push A20 as far right as possible.

2

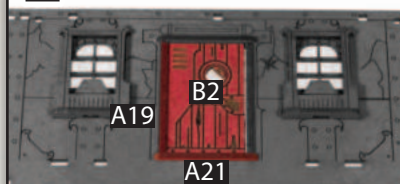


- Glue a second A19 on the other side of the doorway, notch facing the same way as Step 1.
- Hold B2 & A21 together and push into place.

3

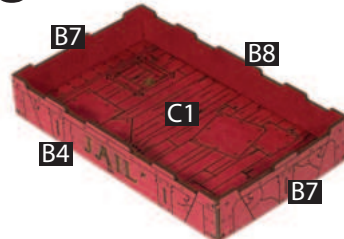


- Combine C1, B4, 2x B7 & B8.
- The trapdoor in C1 can be removed or glued into position.

4

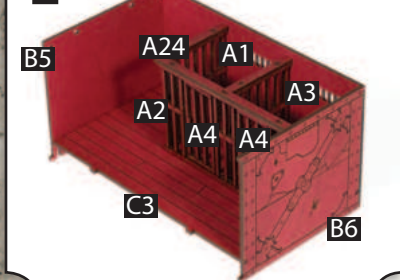


- Connect A1, A2 & A3 to C3. Then connect A24 as shown.
- Connect B3, B5 & B6 to C3.

5

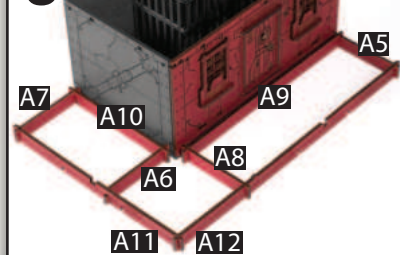


- Combine A12, A11, A10, A9, A5, A6, A7, A8 as shown.
- Connect A6 & A5 to B1.
- Connect A7 & A8 to B5.

6

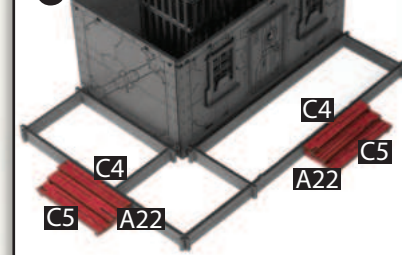


- Attach 2x A22 & C4 to A12, then connect 2x C5 to 2x A22.
- Attach 2x A22 & C4 to A11, then connect 2x C5 to 2x A22.

7

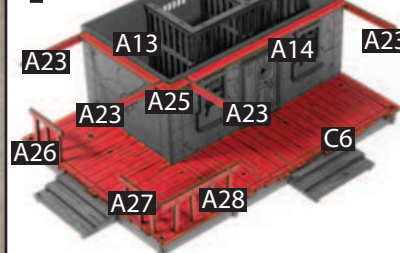


- Connect porch frame to main building.
- Connect C6 to B1, press C6 down onto porch frame.
- Connect A26, A27 & A28 as shown.
- Attach 4x A23 to main building as shown.
- Lastly connect A13, A14 & A25 to main building.

8

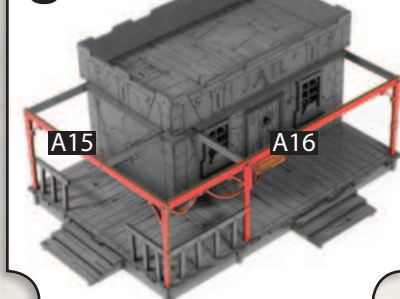

- Connect A15 & A16.
- Place roof on top of building, do not glue.

9

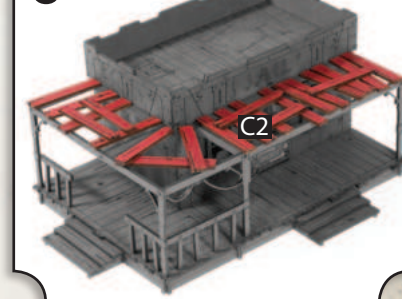

- Place parts labelled C2 where shown. Place longer planks on the corner section (where A15 & A16 connect).