




NOTE: Sandwhich the door between the two panels.

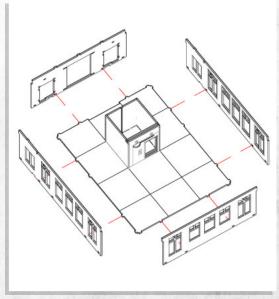



NOTE: Ensure the engrave detail faces inwards.

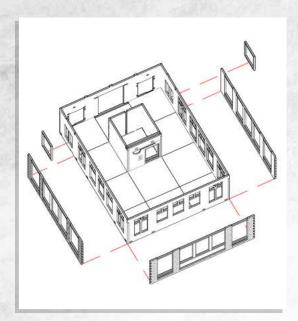




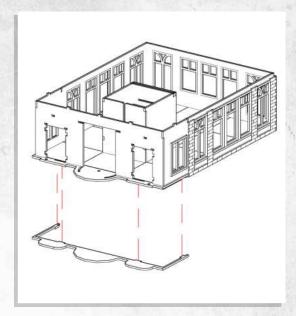


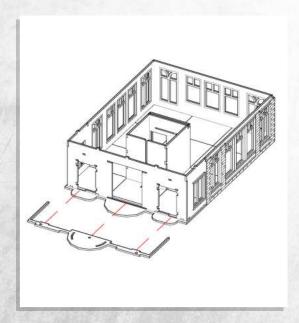

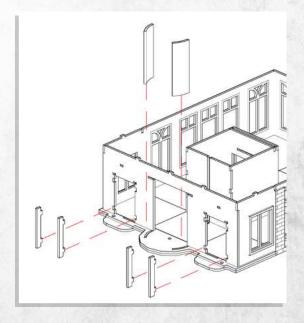





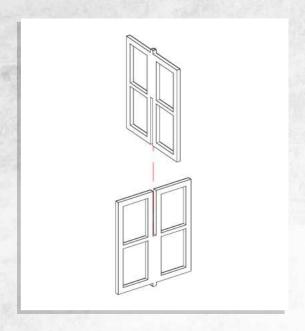

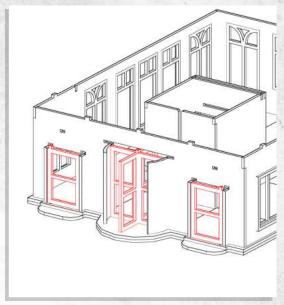



NOTE: Slot the doors into place, without gluing.

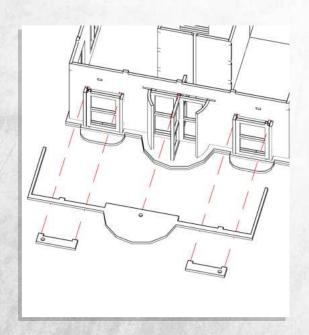


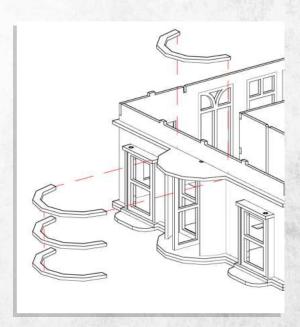




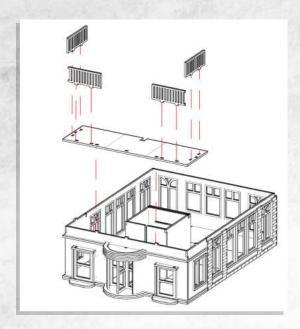

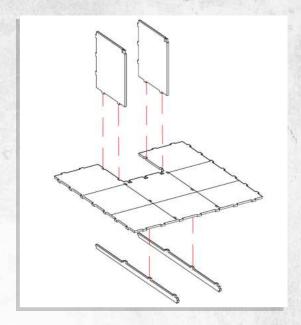


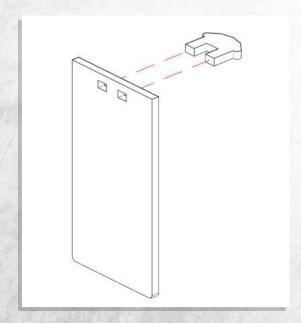


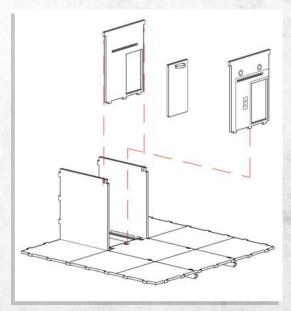


NOTE: Sandwhich the door between the two panels.




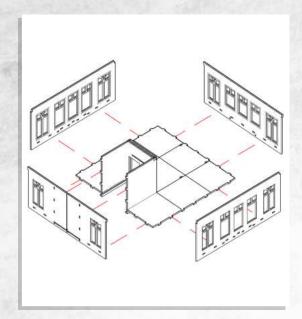

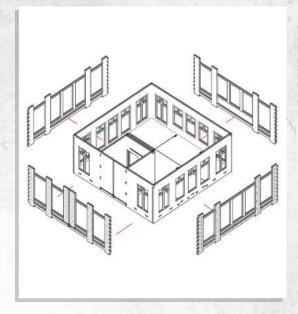

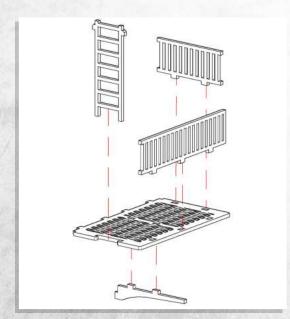



NOTE: Slot the ladders in place, do not glue.

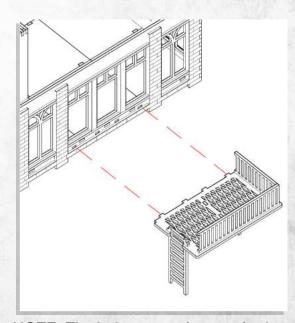


NOTE: The balcony can be attached on either side.




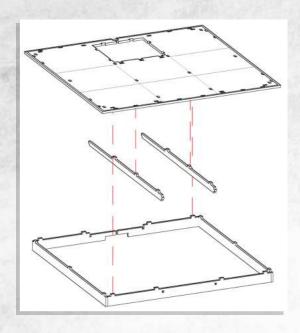

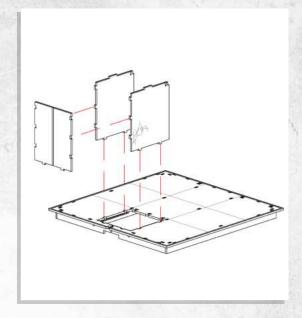


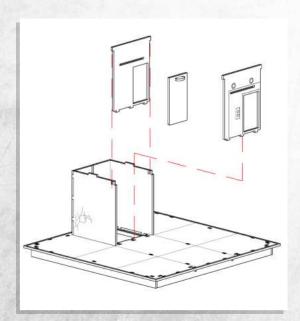


NOTE: Sandwhich the door between the two panels.

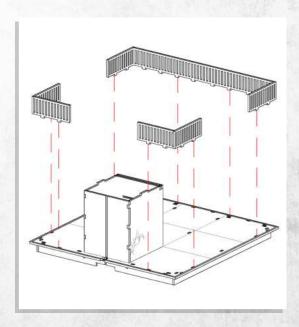




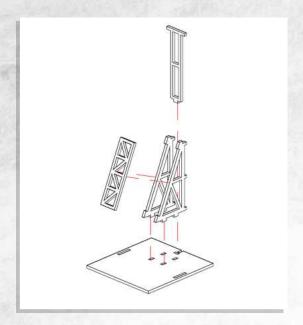


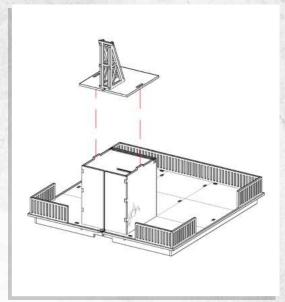

NOTE: Do not glue.

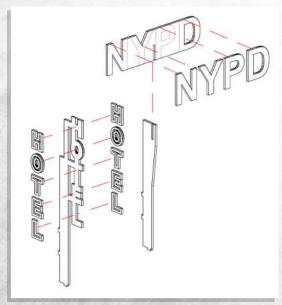


NOTE: Choose a signage option.

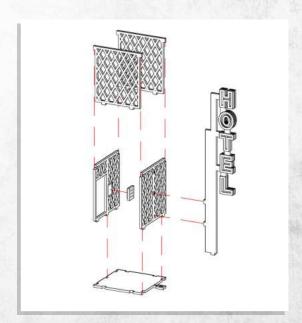



Parts may need careful removal from the MDF boards with a scalpel, and light sanding of any rough edges. We recommend testing assembling sections before permanently gluing together.

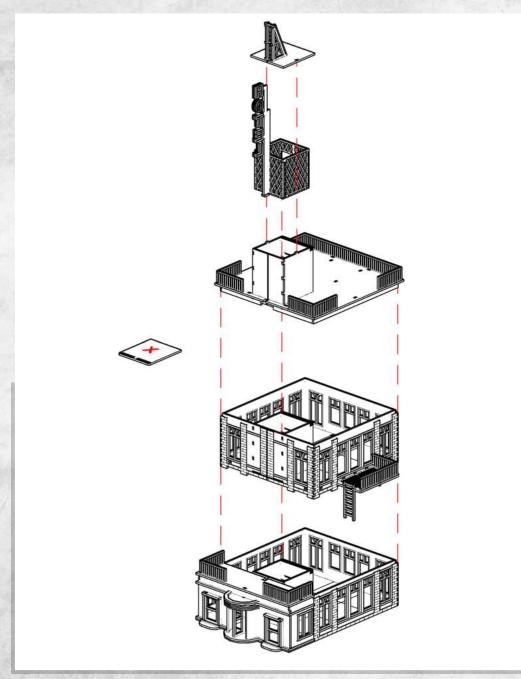

NOTE: Do not glue.

NOTE: Slot part 'X' into the floor on which the lift sits.