



NOTE: Repeat for all three doors

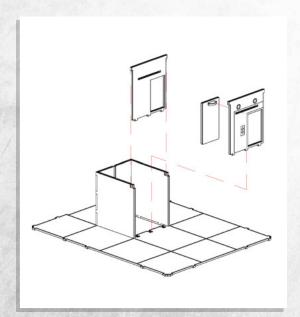



NOTE: Sandwhich the door between the two panels without glue.

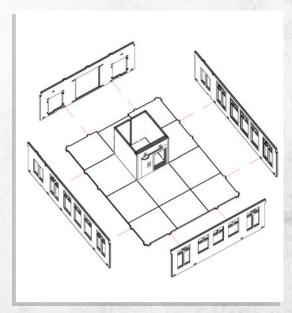



NOTE: Ensure the engrave detail faces inwards.



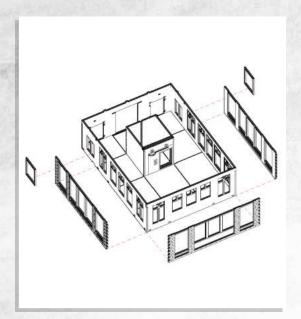


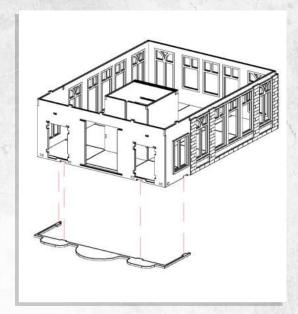


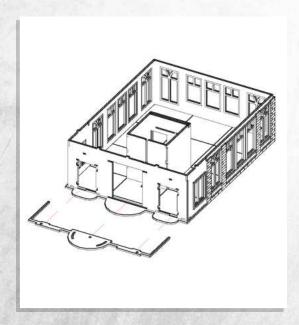

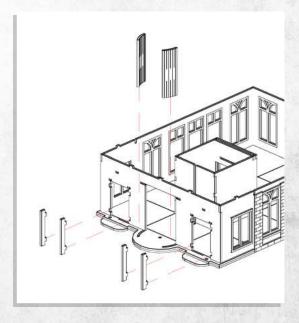





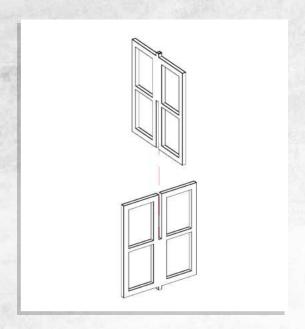

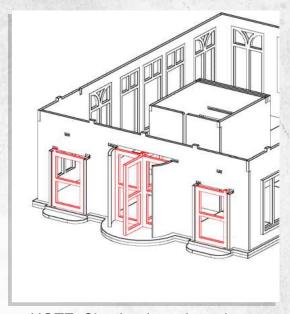



NOTE: Slot the doors into place, without gluing.

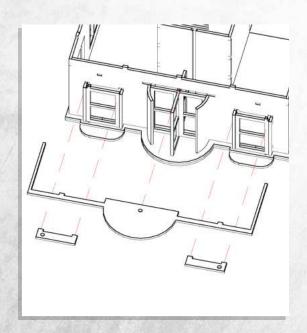


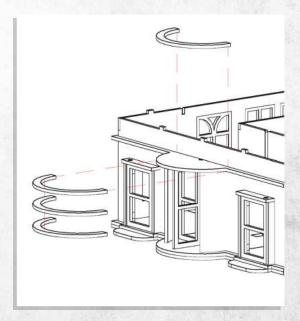




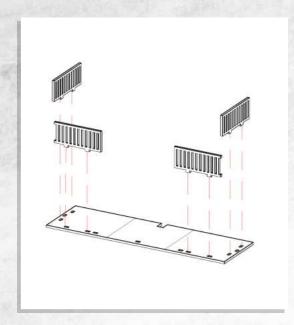

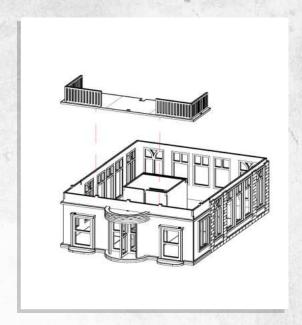


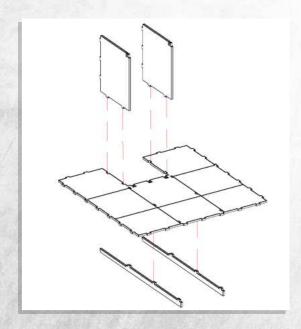


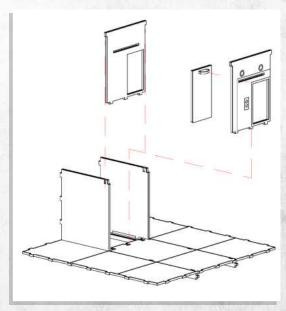


NOTE: Sandwhich the door between the two panels without glue.




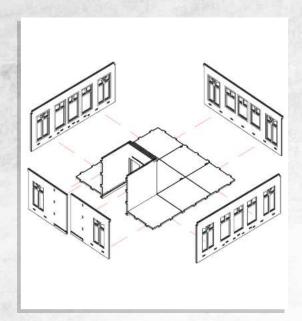

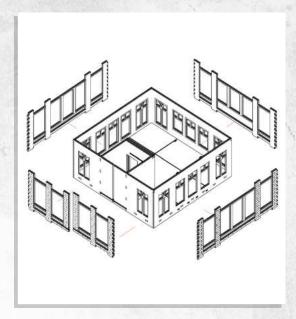

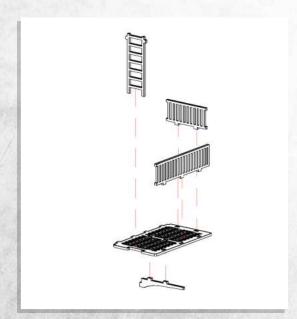



NOTE: Slot the ladder in place, do not glue.

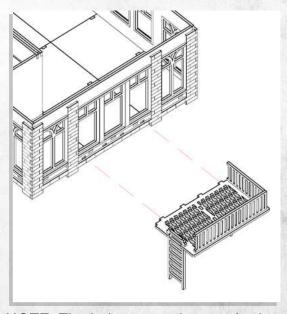


NOTE: The balcony can be attached on either side.




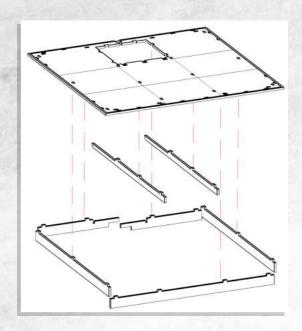

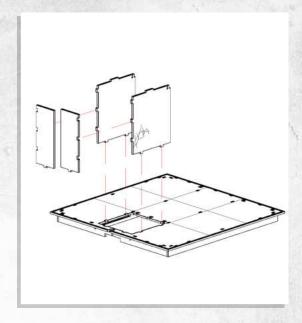


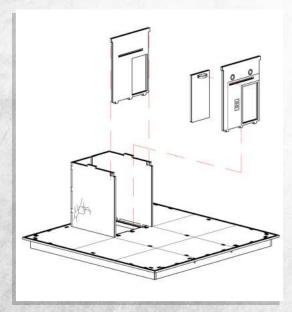

NOTE: Sandwhich the door between the two panels.

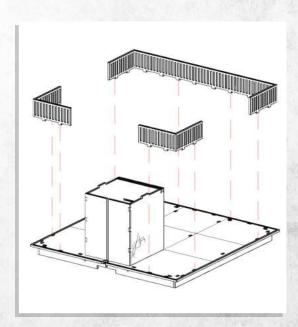





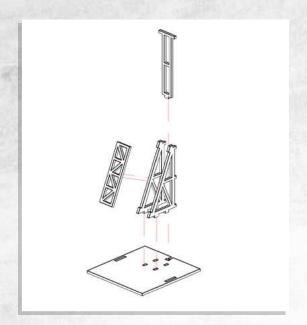



NOTE: Choose a signage option.

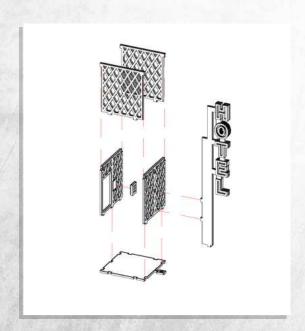


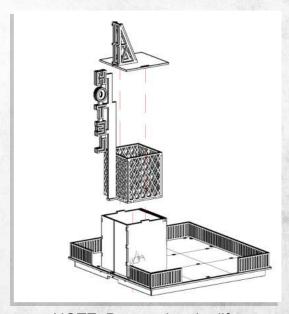

NOTE: Do not glue the lift.



Warning: Pushing parts out by hand may cause damage. Parts may need careful removal from the MDF boards with a scalpel, and light sanding of any rough edges. We recommend testing assembling sections before permanently gluing together.

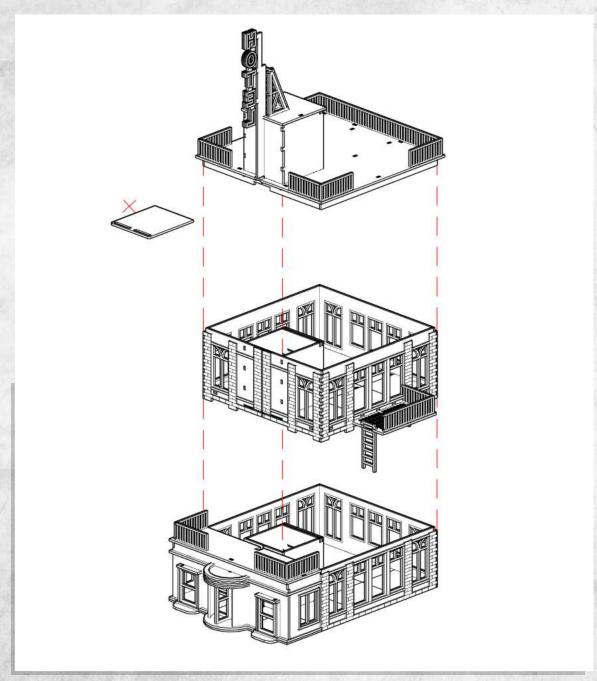

NOTE: Do not glue.

NOTE: Slot part 'X' into the floor of where the lift will rest.

