




NOTE: Do not use glue on the door

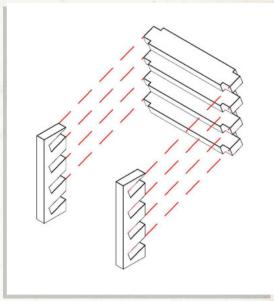


NOTE: Repeat for all three window sets

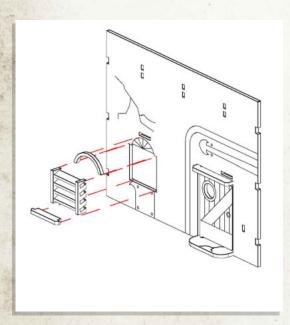


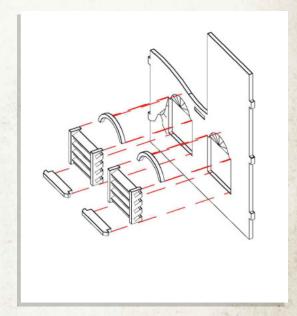




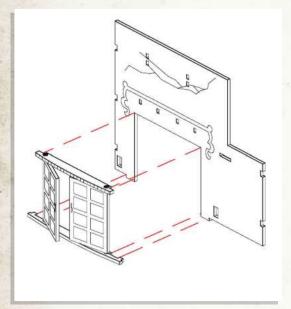


NOTE: Do not use glue on the doors

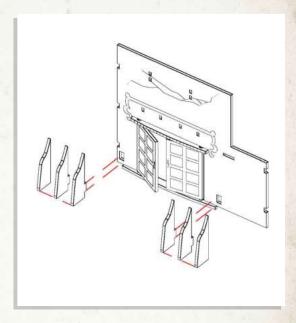


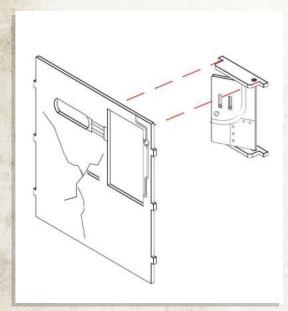


NOTE: Do not use glue on the door

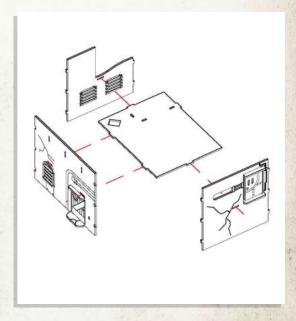





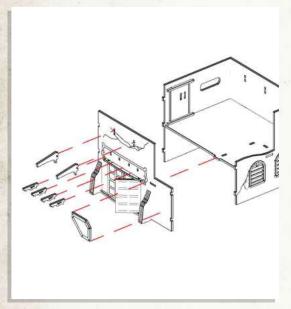


NOTE: For access to the interior, do not use glue to connect the walls

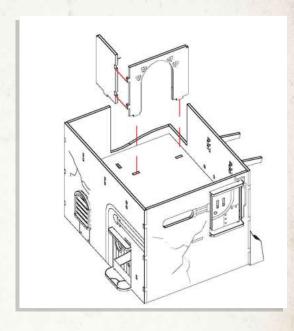


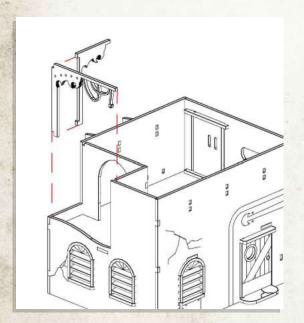


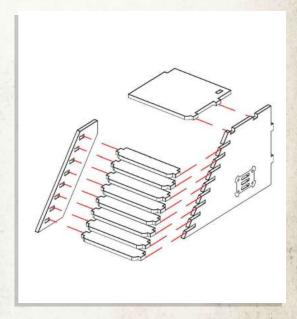




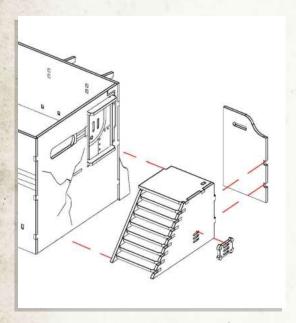


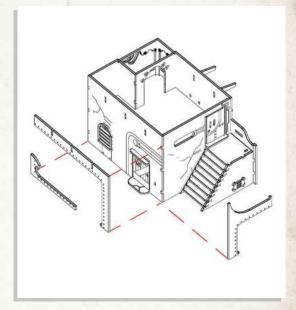


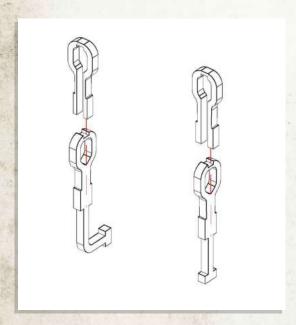


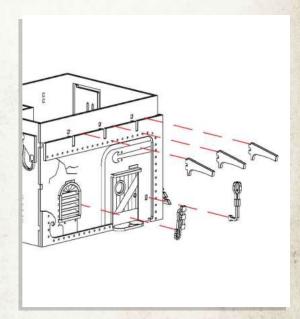




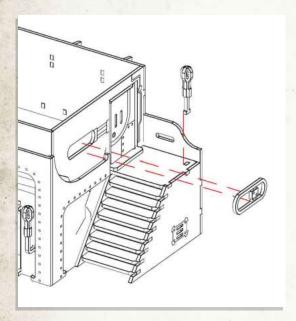

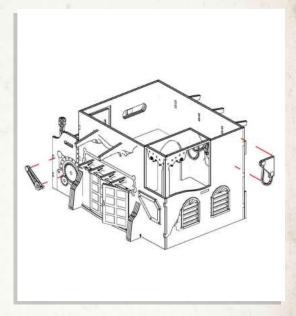

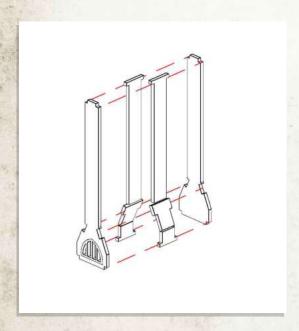

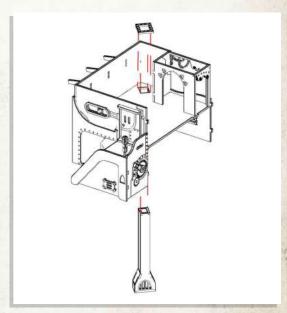



NOTE: Slot the chimney through the hole in the floor







Parts may need careful removal from the MDF boards with a scalpel, and light sanding of any rough edges. We recommend testing assembling sections before permanently gluing together.

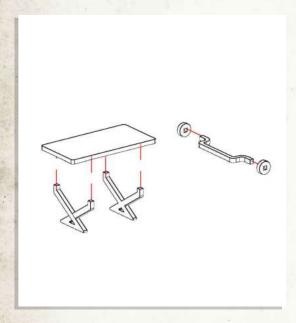

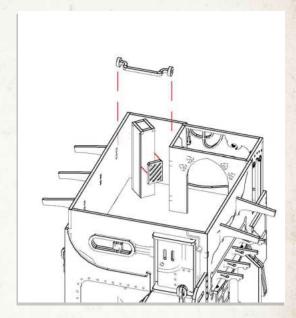

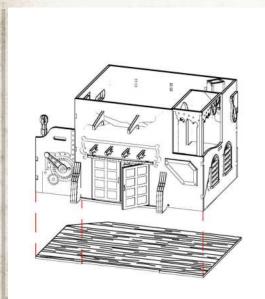


NOTE: To keep access to the interior, Do not glue the floor. keep the floor in place to help with the next step

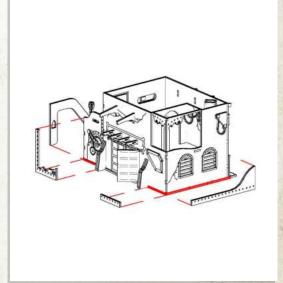



NOTE: Line up pieces with the bottom edge but Do Not put glue where highlighted red






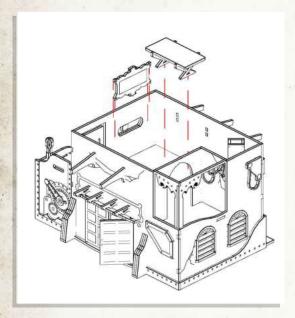


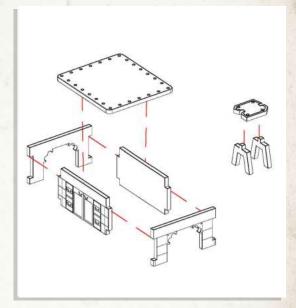


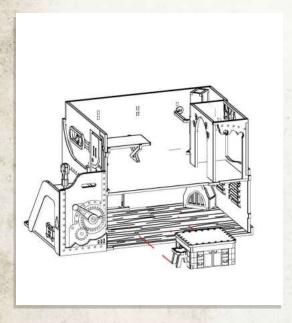


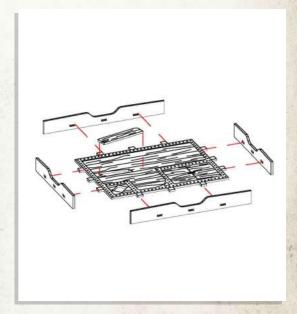




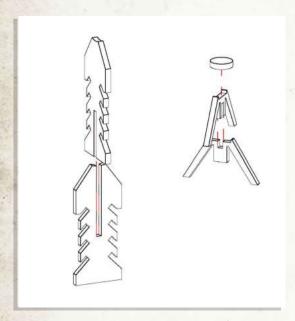

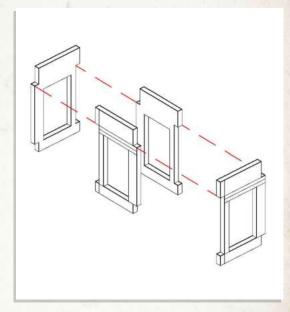

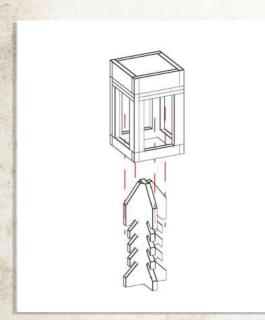


NOTE: Do not use glue and only slide the centre piece half-way into the frame

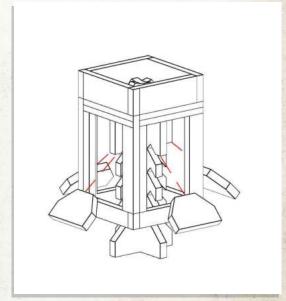


NOTE: Glue the four top slats in place and then slide the centre piece fully into the frame






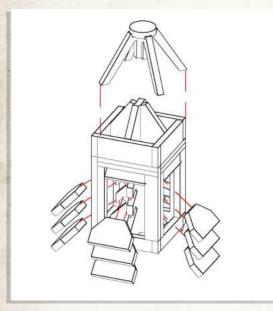

NOTE: Glue the other twelve slats in place

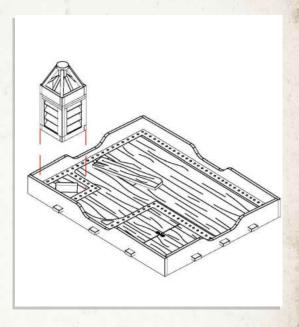

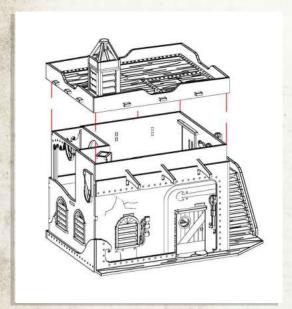

NOTE: Do not use glue on the roof

